


SHINGLEBACK TROLLEY STAND ASSEMBLY INSTRUCTIONS



1. Assemble the trolley stand as shown.

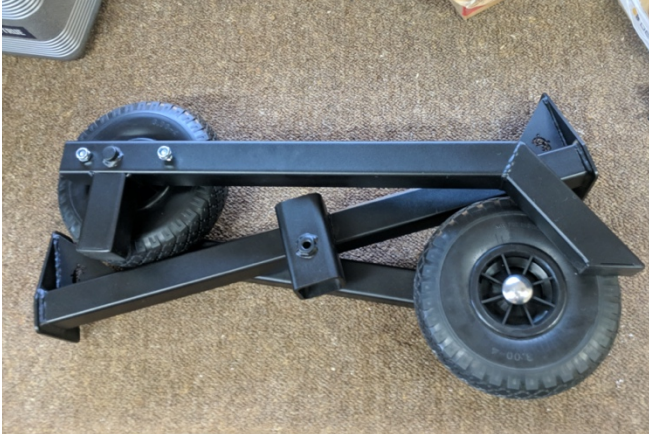

2. Slide your bike rack into the trolley stand's hitch.



3. Tighten the red handle bolt to take up the slop.
There is no need for a hitch pin.

PLEASE NOTE: A FULLY LOADED BIKE RACK ON THE TROLLEY STAND IS QUITE HEAVY – AT YOUR DISCRETION AND WITH CARE IT CAN BE TILTED BACK AND WHEELED AROUND, OR SIMPLY UNLOAD THE BIKES PRIOR TO WHEELING THE TROLLEY STAND AROUND.



**SHINGLEBACK[®]
OFF ROAD**

WE HOPE YOU ENJOY USING YOUR SHINGLEBACK PRODUCT! ANY QUESTIONS?

PHONE: 0400 124 456 (Andrew)

EMAIL: contact@shinglebackoffroad.com.au

WWW.SHINGLEBACKOFFROAD.COM.AU



Shingleback Off Road is a family-owned business. All our products are designed and made in North East Victoria.